





**6CH PROFESSIONAL CAR DSP** 

- + ISO DIN PLUG & PLAY
- + BLUETOOTH AUDIO POWERED



## **CONGRATULATIONS!**

You now own an EXCURSION PXA Plug & Play Series DSP, the product of an uncompromising design and german engineering philosophy. A product made from Car Audio fanatics who truely believe in the relentless pursuit of perfection.

EXCURSION DSP & Amps are the result of several decades of product improvements, competition, innovation and highest quality parts and control standards in industry. When properly installed these products will provide you with many years of listening pleasure and are the perfect balance between high fidelity, extreme performance and long-lasting reliabilty.

Should your EXCURSION product ever need a service, Please record your information on the following lines to refer to in the event that you may need it later.

Dealer's Name
Date of Purchase
Installation Shop
Installation Date

At EXCURSION Intl. we are confident you will have many years of outstanding enjoyment from your high performance investment. For maximum performance we recommend that you have your new EXCURSION PXA DSP installed by an exclusive Authorizied EXCURSION Dealer

To learn more about EXCURSION, please visit us on the World Wide Web at


http://www.excursion.us

#### **CAUTION!**

Continuous exposure to sound pressure levels in excess of 100dB can cause permanent hearing loss. EXCURSION Products are capable of producing sound pressure levels well over 170dB. Please observe all local sound ordinances while listening to your EXCURSION System. EXCURSION Intl. acceptss no liability for hearing loss, bodily injury, or property damage due to the result of use or missuse of this product.



## **FEATURES**

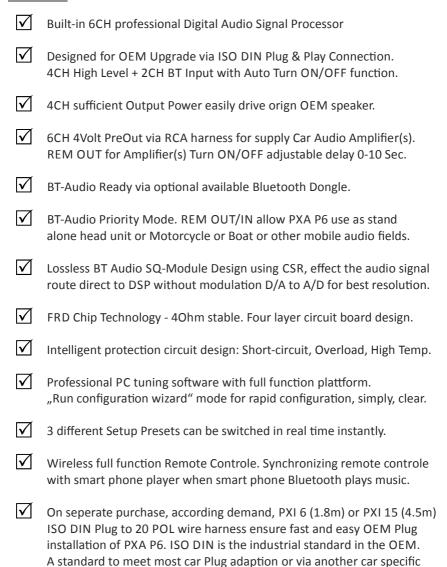

to ISO Adapter. Therefor, according demand, PXI QLA (QuadLock Adapter) is one kind to OEM Plug most of the latest car models. Please ask your authorizied EXCURSION retail specialist your fact car demand for easy Plug&Play install and purchase exact: "all you need"

# **TECHNICAL SPECIFICATIONS**

PXA P6 Power supply Working voltage: DC8.5 -16V

0.32AIdling current: <2.5mA Standby current: 9-16V Remote IN voltage:

DC12.8V(380mA) Remote OUTvoltage:

Signal Processor

Distortion - THD @ 1 kHz, 1 VRMS Output: 0.02%

Bandwidth@ -3 dB: 20 ÷ 19.5K Hz

S/N ratio@ Aweighted(High level input): 97dB Channel Separation@ 1 kHz: 80 dB

Input sensitivity (High Level): 600mV - 15V

Input impedance (High Level): 50Ω Max Output Level(RMS) @ 0.1% THD: 4V

Input/output

High level: 4 Channel Max Bluetooth input: 2 Channel Stereo Line Output: 6 Channel Max 4x 30Wrms

4 Ohm (Stereo) Power:

Crossover

Filter type: Full / HPF / LPF / BPF

Filter mode and slope

Linkwitz: 12/24 dB

Butterworth: 6/12/18/24 dB

Crossover Frequency 70 steps:  $10 \div 20K$ Phase control: 0° / 180°

Size


LxWxH: 96x85x38mm

Weight: 0.45 KG



#### FRONT PANEL LAYOUT

#### **REAR PANEL LAYOUT**

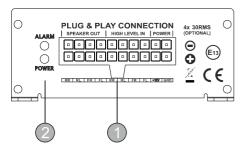



#### 1. 20 POL PLUG & PLAY CONNECTION

Matching dedicated ISO DIN Plug & Play harness for different cars. Makes sure that you connect your PXA P6 directly to your factory head unit while keeping orign status. On extra purchase you can choose suitable between PXI 6 (1,8m) and PXI (4,5m).

Caution: When connecting the dedicated harness, please check whether the line order of the wire harness is consistent with the original line sequence in order to avoid damage to other equipment.

## 2. ALARM (Protection Indicator)

The red ALARM LED indicator will light up and flash if there is fault presented like short circuit, overheat or under voltage protection. PXA P6 will stop working.

# 2. POWER (Working Indicator)

When PXA P6 turn on the blue indicator flashes three times and go into constant light state. After self-checked into normal working state, the blue working indicator is in constant light state.

#### 3. BLUETHOOTH INPUT

PXA P6 is Bluetooth Audio ready. On extra purchase PXI BTD Bluetooth Dongle the PXA P6 can receive stereo digital signals from Bluetooth Output Source. For BT Connection with BT Output Source the firmware password is saved: 8888


#### 4. LINE OUT

Is provided with 6CH RCA Low Level signal Output. REM OUT to turn ON/OFF external amplifier. REM IN to turn ON/OFF PXA P6 if used as Head Unit device.

#### 5. USB

Use USB cable from accessory to connect PC to PXA P6 to adjust 6CH DSP settings.



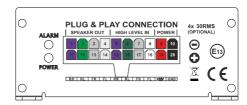

- 1. Loudspeaker output real right (-)
- 2. Loudspeaker output real left (-)
- 3. Loudspeaker output front right (-)
- 4. Loudspeaker output front left (-)
- 5. High-level loudspeaker input real right (-)
- 6. High-level loudspeaker input real left (-)
- 7. High-level loudspeaker input front right (-)
- 8. High-level loudspeaker input front left (-)
- 9. Power supply +12V
- 10. Ground

- 11. Loudspeaker output real right (+)
- 12. Loudspeaker output real left (+)
- 13. Loudspeaker output front right (+)
- 14. Loudspeaker output front left (+)
- 15. High-level loudspeaker input real right (+)
- 16. High-level loudspeaker input real left (+) 17. High-level loudspeaker input front right (+)
- 18. High-level loudspeaker input front left (+)
- 19. Power supply +12V
- 20. Ground

#### PXA P6 - ISO DIN OEM PLUG CONNECTION INSTRUCTION



#### Attention:

If you car does not meet meet ISO DIN or Quadlock standard please ask your local authorizied EXCURSION purchase retailer about your individuell OEM car standard for easy OEM Plug Installation of your PXA Series product.

- ① These Plugs are used to connect the OEM car spaker and Power Supply to Headunit wire socket.
- (2) Female jack is insterted into ISO Plugs for Speaker & Power of the car. Former inserted to Headunit.
- (3) The 20Pol plug of PXI 6 or PXI 15 harness is inserted into the corresponding jack of the PXA P6



## PXA P6 - BLUETOOTH/LOW LEVEL SIGNAL CONNECTION INSTRUCTION



- ④ Bluetooth stereo signal input terminal is to connect to our dedicated BT-3.
  The interface adopts fool-proof design. Please pay attention to its direction when install it.
- (5) Low Level signal input terminal. Convenient for future expansion and upgrading.

# **EXCURSION PXA DSP SOFTWARE DESCRIPTION**

# 1. Software download and installation instructions:

Download PXA DSP Software from official EXCURSION website: **www.excursion.us** Follow hint complete installation and double click the shortcut icon to start operation.

As shown:



# 2. Precautions for software installation:

Please download & install PXA DSP Software first before connect PXA P6 to PC. Software works on Windows Operation System PC with following configuration:

OS: Windows XP / Windows VISTA / Windows 7 / Windows 8 / Windows 10

CPU : 1.6 GHZ minimum Memory : 1 GB minimum Hard Disk : 512 MB minimum


Graphic Card: 1280\*768 pixel resolution minimum

Note: Windows 7, VISTA, XP require installation of Microsoft Net Framework 4 tool before installation PXA DSP Software to the PC = # dotNetFx40\_Full\_x86\_x64

# 3. Introduction PXA DSP Software main interface:

PXA DSP tuning software has 2 main tuning control interfaces:

A) X-over and Equalizer Setup (default access after start software)

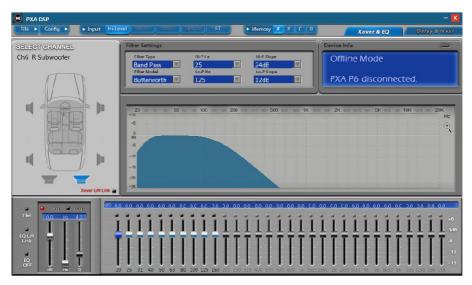

B) Time Delay and Level Setup





# **EXCURSION LIMITED WARRANTY POLICY**

EXCURSION Intl. offers limited warranty on EXCURSION products under normal use on the following terms:

EXCURSION DSP & Amplifier are to be free of defects in material & workmanship for a period of one year.

This warranty applies only to EXCURSION products sold to consumers by Authorizied EXCURSION Dealers in Germany. Products purchased by consumers from an EXCURSION dealer in another country are covered only by that country's Distributor and not by EXCURSION Intl.

This warranty covers only the original purchaser of EXCURSION product. In order to receive service, the purchaser must provide EXCURSION with the receipt stating the consumer name, dealer, product and date of purchase.

Products found to be defective during the warranty period will be repaired or replaced (with a product deemed to be equivalent) at Excursion's discretion and will not be liable for incidental or consequential damages. EXCURSION will not warranty this product under the following situations:

- \* DSP and Amplifiers received with apparent rust or corrosion
- \* Any evidence of liquid damage or exposure to excessive heat
- \* Attempted repairs or alterations of any nature
- \* Product that has not been installed according to this owner manual

Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. No person is authorized to assume for EXCURSION any other liability in connection with the sale of this product.

Please call prior your authorizied EXCURSION dealer the product got purchased. In case they are not accessible call 0961-416-0420 for EXCURSION Customer Service. You must obtain an RA# (Return Authorization Number) to return any product to EXCURSION Intl. The RA number must be prominently marked on the outside of the shipping carton or the delivery will be refused. Please pack your return carefully! We are not responsibile for items damaged in shipping. Return the defective product along with a copy of the original dated retail sales receipt, plus 10,- EUR for handling and diagnostic evaluation to:

EXCURSION Intl. - A Division of CHPW Attn: Returns (RA# ......)
Neustaedter Str. 20
D-92685 Floss / Germany



# **EXCURSION - A Division of CHPW**

All Rights reserved - Intl. Trademark No: 010 640 597

Friedrich-Ebert-Str. 42 - D-92637 Weiden / Germany Tel: (+49) 961-416 04 20 - Fax: (+49) 961-46 04 41



